





Insert filament (Prior to printing)

Written By: Moustafa Impressoras 3D




Step 1 — Heating the nozzle

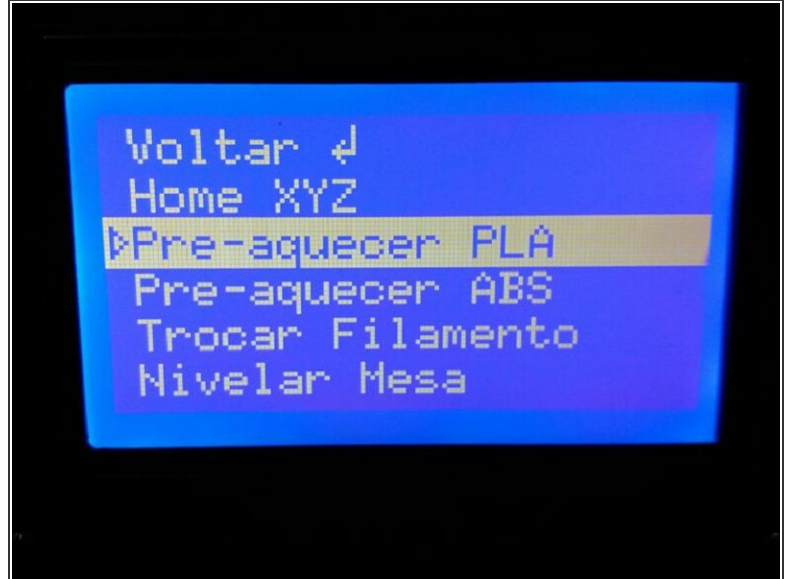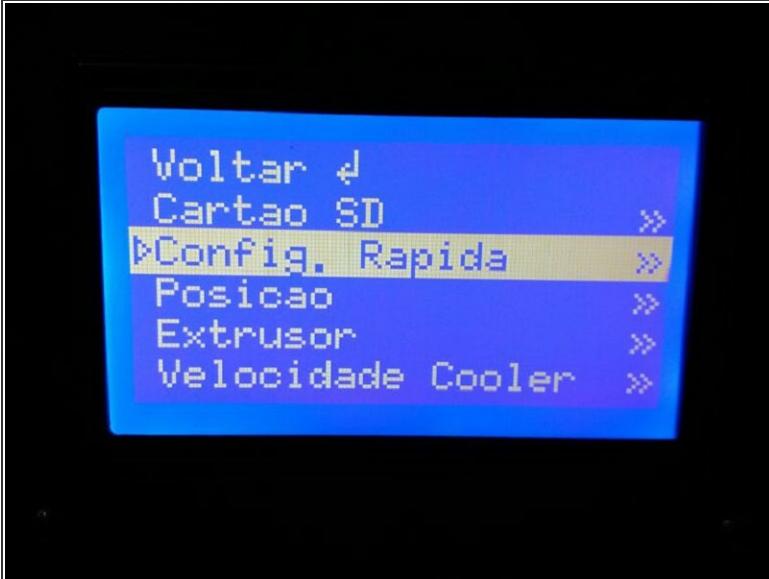


- Select "Config. Quick" in the start menu.
- Select the "Pre-heat" option PLA

Step 2 — Entering the filament

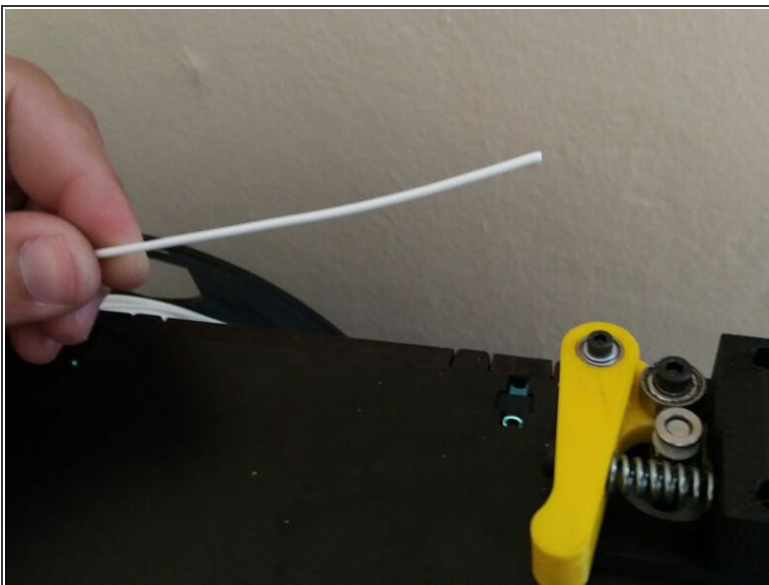

- Press the ear of the extruder with one hand and insert the thread in the hole, as shown in the photos.

Step 3 — Entering the filament

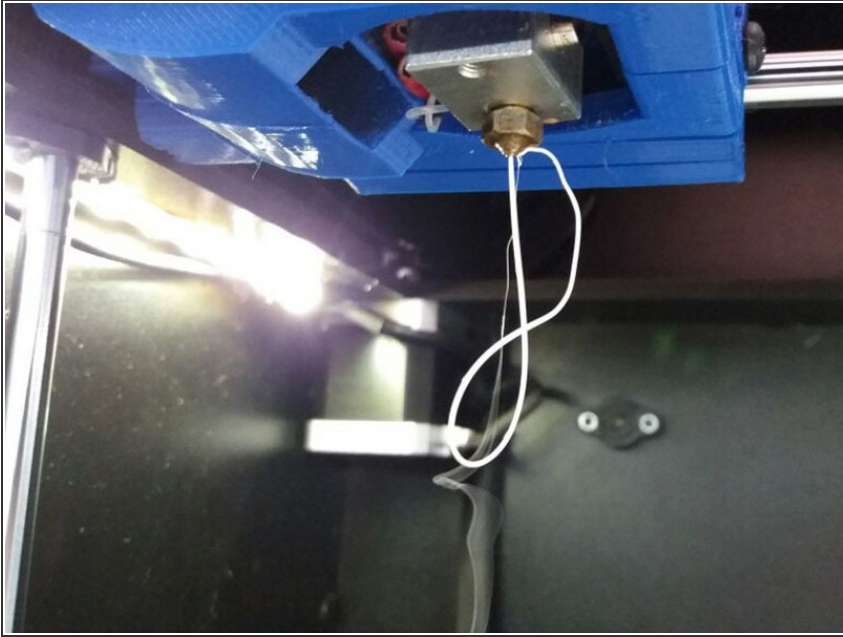

- Push the filament by PTFE tube until it comes out the nozzle, to make sure it was entered to the end.

Pronto! Seu Filamento está inserido!

This document was last generated on 2017-06-19 01:43:47 PM.